



Multi-use Panel

Installation Guide

Tools


- Safety Glasses
- Ear Muffs
- Dust Mask
- Tape Measure
- Skill Saw
- Drill
- Button Head Screws

Disclaimer

This document must be read in conjunction with:

- Material Safety Datasheet
- Specification

- 1 Install posts/ vertical supports at 1.2m centers

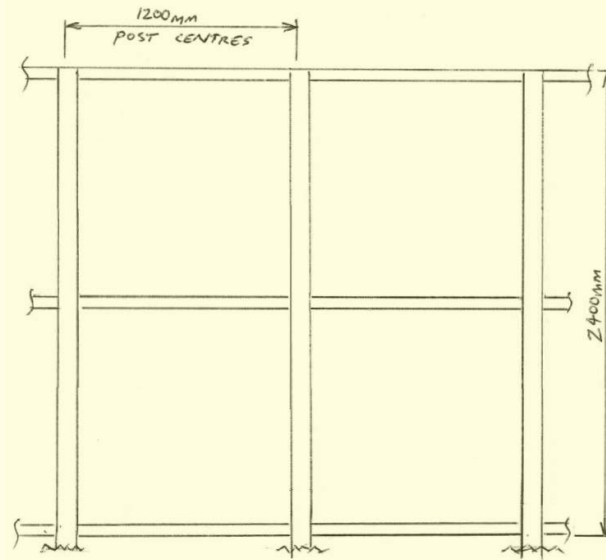


- 2 Install top and bottom plate 2.4m apart + central support nog.


- 3 Any cutting requires mechanical tools. We recommend using a fine tooth carbide tip saw and clean up with orbital or belt sander.

- 4 Paint the back of the boards with ordinary fence paint. The paper backing is not structural, however aesthetically the paper will deteriorate over time without painting and look untidy.

- 5 Fix boards at 300mm centres using Button or Truss head screws. Alternatively use a flange head screw.

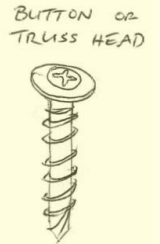

- 6 All edges and board centers must be supported. If installed horizontally the same edge support must be in place.

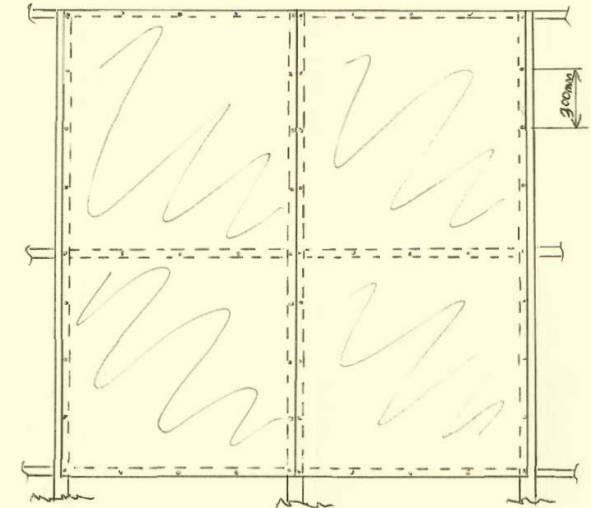

- 7 At the end of the boards life or at signs of wear, please palletise any boards or offcuts and send to:

saveBOARD
15 Production Ave
Warragamba
NSW 2752

Free disposal service, where the panels will be remanufactured into new saveBOARD products.